

COOLZONE®



CZ51029
Table top freezer



USER INSTRUCTIONS

Please read these instructions carefully before using this product and keep them safe for future reference.

 
Before Use

Packaging

The packaging is recyclable so dispose of it according to local regulations. Keep the packaging materials out of reach of young children.

Warning


The fridge is heavy and care is needed when unpacking and moving it. Get extra help and only hold it by the casing – not the door or trim.

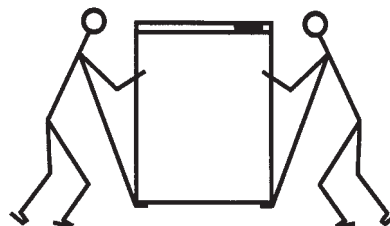

Parts identification

1. Thermostat control
2. Drip tray
3. Shelf x 1
4. Door
5. Adjustable foot

 FIGURE 1

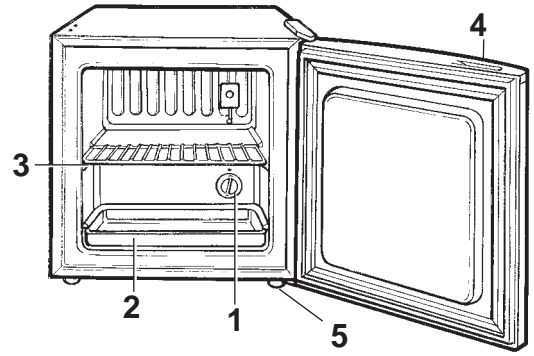

After unpacking, wipe the casing with a dry cloth and clean the inside with a damp cloth ready for use.

Do and Don't

- ❖ Do read these instructions thoroughly before using this appliance.
- ❖ Do install the appliance only in the vertical position.
- ❖ Do stand for 12 hours to allow the cooling gases to stabilise if transported in a horizontal position.
- ❖ Do install to allow for adequate ventilation around the appliance (see Figure 5).
- ❖ Do not install near heaters or other heat sources.
- ❖ Do unplug before cleaning and maintenance.
- ❖ Do defrost regularly for maximum efficiency.
- ❖ Don't install the appliance in humid or extreme conditions.
- ❖ Don't attempt to repair the appliance yourself (see Helpline information – back page).
- ❖ Only use it in accordance with the manufacturer's instructions.
- ❖ Don't use any other electrical device inside the appliance to defrost.
- ❖ Don't store goods containing inflammable or other explosive gases.
- ❖ Don't leave door closed if appliance is left switched off for long periods.

Door reversal

Reversing the door may make installation more convenient. The appliance must be tilted and supported in order to carry this out; it is therefore advisable to get an assistant to help during this procedure. Take care when fitting and tightening screws.

1. Remove the top hinge cover, hinge screws, washers and hinge (Figure 2).
2. Lift the door off the lower hinge pin.
3. Tilt and support the appliance. Unscrew the lower hinge bracket screws and remove the lower hinge bracket (Figure 3).
4. Remove the left-hand fixed foot (Figure 4).
5. Remove the adjustable foot from the lower hinge and turn the hinge upside down. Re-fit the pin and adjustable foot. Fit the lower hinge to left-hand side of the cabinet.
6. Remove the blanking caps which cover the left-hand fixing holes and fit them to the holes on the other side of the cabinet.
7. Support the door on the lower hinge pin. Take the hinge and locate the pin in the bush at the top of the door. Fit the hinge to the top of the cabinet with the hinge screws and washers. Fit the hinge cover.
8. Screw the fixed foot into the corresponding hole on the other side of the cabinet.

FIGURE 2

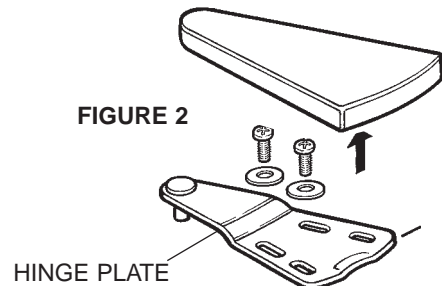 


FIGURE 3


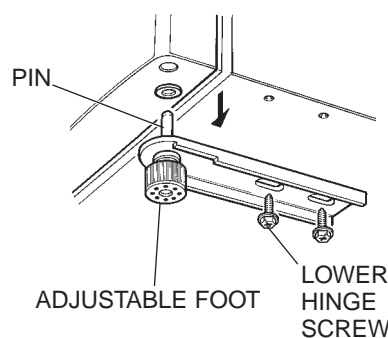 


FIGURE 4

 FIGURE 5

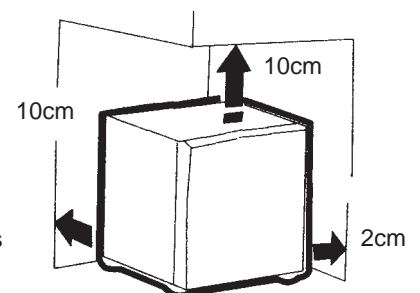

The diagram shows the correct air flow allowance that should be left around the appliance.

Installation

Important

Make sure that the voltage marked on the rating label on the product corresponds with the voltage in your home.

This quality product has been tested and certified to meet all applicable UK electrical and safety standards.

The appliance is designed to operate at normal room temperatures. Position it away from heat sources such as boilers, ovens or heaters that will reduce the cooling efficiency of the freezer. It is also not advisable to install the appliance in unheated locations such as garages or outbuildings, as these will impair the operation of the freezer in winter.

The freezer requires space around the casing for efficient cooling and operation. The minimum clearances are shown in Figure 5.

The freezer must be installed on a firm, flat and level surface for it to work quietly and efficiently. If necessary, turn the adjustable foot to level the appliance.

Controls

Switching on

Plug the freezer into a nearby power socket and switch on. A humming from the compressor will indicate that the freezer is running.

Temperature control

Turn the thermostat control to Normal position on the dial and leave the freezer running with the door closed for approximately 2 hours. This will allow the inside temperature to stabilise.

If you wish to decrease the temperature inside the freezer, turn the thermostat control towards Max position on the dial.

Note: The setting on the thermostat control is dependent upon room temperature and the external temperature.

Notes on operation

During normal operation the following noises may be heard:

- ❖ Stifled murmur from compressor when it is working.
- ❖ Soft gurgling from the coolant flowing through the cooling system.
- ❖ Click from the thermostat switching on and off.

Note: It is advisable to place a freezer thermometer (not supplied) inside the freezer to check that the temperature is maintained at -18°C to -20°C .

Using the freezer

The freezer is capable of producing very cold temperatures which may cause injury if safety precautions are not observed:

- ❖ Do not attempt to freeze carbonated drinks such as fizzy pop, mineral water, champagne etc. as the bottles may break when frozen. Drinks in PEP plastic bottles must not be frozen.
- ❖ The freezer must only be used for the storing of edible foodstuffs.
- ❖ Frozen food that has thawed should not be re-frozen.

Food which has been purchased frozen should be kept in its original packaging. Maximum storage times and expiry dates are usually given on the food packaging.

IMPORTANT

Do not re-freeze food that has thawed or partially thawed.

When cooking food you must ensure it has thoroughly thawed, this is especially important for poultry and sea food.

Maintenance and cleaning

Important: The freezer must be turned off at the mains before maintaining or cleaning. It is recommended to clean and wipe out the freezer after any spillage inside or outside the appliance.

It is wise to defrost if the ice build up exceeds 6mm, otherwise the efficiency of the freezer will reduce and the electricity consumption will increase.

Caution: To avoid 'ice burns' do not touch ice with bare skin

Unplug and remove the freezer contents.

Leave the door open until ice has melted. Alternatively, a bowl of hot (not boiling) water placed on the shelf will hasten defrosting. A plastic scraper may be used as an aid to defrosting.

- ❖ Do not use electrical appliances such as heaters or hair dryers to melt the ice.
- ❖ Do not use metal objects such as knives or skewers to chip away the ice as these can damage the surface.

Finally, wipe the interior surfaces and door seal using a teaspoonful of bicarbonate of soda diluted in a pint of warm water to remove any residues or odours.

Keep water away from the thermostat housing.

Keep the compressor motor (located at rear of casing) free from dust to maintain optimum efficiency. Use a soft brush or vacuum cleaner to remove the dust, taking care not to damage the pipes and wiring.

The external casing can be cleaned with warm soapy water and protected by polish. Do not use scouring powders which can scratch the surface.

Note: If leaving the freezer unused for a prolonged period, unplug from mains, defrost, wipe dry and leave the door open.

Troubleshooting

Problem	Possible cause	Remedy
Appliance does not run	No power Faulty fuse Thermostat setting too low	Check power is switched ON Check fuse in plug Turn thermostat setting higher
Freezer is not cold enough	Door is open for too long Located too near a heat source Inadequate airflow around appliance	Do not open door needlessly Relocate appliance See Figure 5
Abnormal noise and vibration	Appliance not level Cooling tubes touching cabinet or other parts	Choose a level surface Carefully ease away tubes from other parts

Fuse and mains plug replacement

This product is supplied with a fitted plug which contains a 13A fuse. If you are simply replacing the fuse, you must use a 13A fuse which has been approved by ASTA to BS1362.

If the plug does not fit the socket or becomes damaged, a new plug must be fitted. Replace the original plug with the correct plug for your socket. If this is a 3-pin (square pin) 13A (BS1363) plug, you must make sure that it is fitted with an ASTA approved 13A fuse.

If another type of plug is used, it must be protected by a 15A fuse, either in the plug or at the distribution board.

1. Cut off the existing fitted plug.

2. The wires in the mains lead supplied with this appliance are coloured in accordance with the following code (Figure 6):

GREEN/YELLOW = EARTH (E) BLUE = NEUTRAL (N) BROWN = LIVE (L)

This product must be earthed.

As the colours of the wires in the mains lead may not correspond with the colour markings identifying the terminals in your new plug, proceed as follows.

The wire which is coloured GREEN or YELLOW/GREEN must be connected to the terminal which is marked with the letter E or ⊕ symbol or coloured GREEN or YELLOW/GREEN.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK or BLUE.


The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED or BROWN.

3. Ensure that the connections are tight and that no loose strands are left out of the terminals.

IF IN ANY DOUBT CONSULT A QUALIFIED ELECTRICIAN.

If the mains lead becomes damaged consult a qualified electrician.

 FIGURE 6

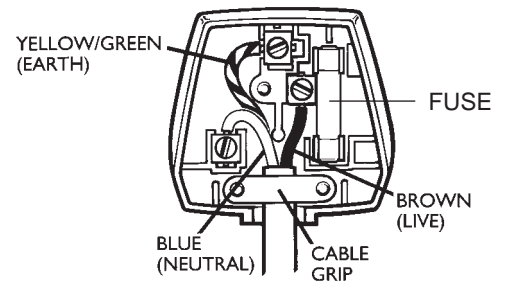

Specification

Capacity (litres)	40
Dimensions: HxWxD mm	507x470x450
Power supply	220/240V, 50Hz
Climate class	N
Refrigerant	R600a
Energy class	A

Product specification may vary without prior notice.

Safety measures

Never try to repair the appliance or the electrical parts yourself. Any repair carried out by an unskilled person is dangerous and may affect the guarantee. Contact the Helpline below for assistance and advice.

Disposal of old chiller or freezer

Disposal of the appliance must conform with EU environmental regulations.

Cut off the mains lead and remove any door locks to ensure the appliance is beyond further use.

The appliance must be delivered to an authorised collection centre.

After sales service

This appliance is guaranteed for a period of two years from date of purchase against defects in materials and workmanship only, and provided that all these user instructions have been strictly complied with. The guarantee does not cover incidental or consequential loss, such as loss of food.

Where this guarantee applies, the appliance will be repaired or replaced at the manufacturer's option without charge. If the guarantee does not apply or has expired, you will be given a quotation for cost of repairs and any parts required.

Keep your purchase receipt with these instructions, and in the event of breakdown contact the HELPLINE on 0844 871 0011.

**For Faults and Assistance
Helpline
Phone: 0844 871 0011**