

COOLZONE[®]



CZ51105
Dual Compartment Drinks Chiller

USER INSTRUCTIONS

Please read these instructions carefully before using this product and keep them safe for future reference.

Page contents

Check the contents	2
Before use	2
Parts identification	2
Do and Don't	3
Door reversal	3
Installation	4
Controls	4
Interior light	5
Maintenance and cleaning	5
Troubleshooting	6
Fuse and mains plug replacement	6
Specification	7
Safety measures	7

Check the contents

Check the following contents are included with the product and inspect the casing for any damage. If there is any damage, contact the retailer from whom you purchased the product.

- Wine racks x 5
- Wire basket x 1
- 2 keys

 
Before use

Packaging

The packaging is recyclable so dispose of it according to local regulations. Keep the packaging materials out of reach of young children.

Warning


The chiller is heavy and care is needed when unpacking and moving it. Get extra help and only hold it by the casing – not the door or trim.

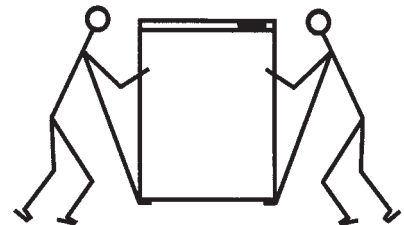

Parts identification

1. Temperature controls x2
2. Wine racks x 5
3. Doors
4. Basket
5. Keys x 2 (not shown)

 FIGURE 1

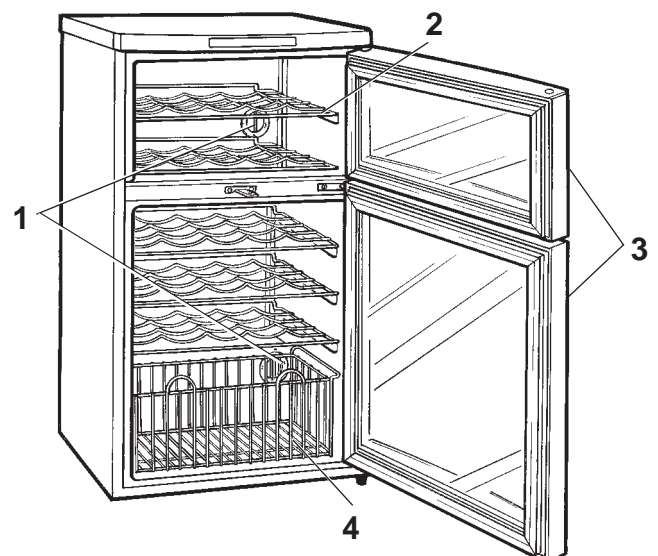

After unpacking, wipe the casing with a dry cloth and clean the inside with a damp cloth ready for use.

Do and Don't

- ❖ Do read these instructions thoroughly before using this appliance.
- ❖ Do install the appliance only in the vertical position.
- ❖ Do stand for 2 hours to allow the cooling gases to stabilise if transported in a horizontal position.
- ❖ Do install to allow for adequate ventilation around the appliance.
- ❖ Do not install near heaters or other heat sources.
- ❖ Do unplug before cleaning and maintenance.
- ❖ Don't install the appliance in humid or extreme conditions.
- ❖ Don't attempt to repair the appliance yourself – (see Helpline information – page 7).
- ❖ Only use it in accordance with the manufacturer's instructions.
- ❖ Don't use any other electrical device inside the appliance to defrost.
- ❖ Don't store goods containing inflammable or other explosive gases.
- ❖ Don't leave door closed if appliance is left switched off for long periods.

Door reversal

This appliance has the facility to hang the door on the opposite side.

Depending upon where you plan to locate the appliance, reversing the door may make access more convenient.

Care must be taken to support the doors while removing the brackets and hinges.

1. Remove the lower bracket, spacer and adjustable foot (Figure 2).
2. Remove the lower door.
3. Remove the central hinge, washers, spring washers and screws (Figure 3).
4. Release the top door from the cabinet.
5. Remove the fixed foot (Figure 4).
6. Remove any blanking caps which cover the left-hand fixing holes and fit them to the holes on the other side of the cabinet and doors.
7. Reassemble the hinges and doors on the opposite side of the casing.
8. Screw the fixed foot into the corresponding hole on the other side of the cabinet.

FIGURE 2

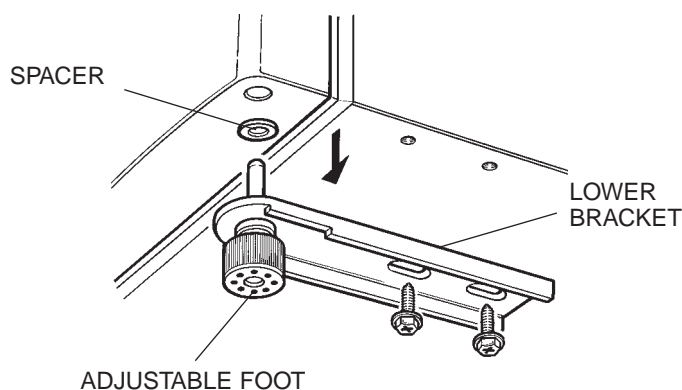 


FIGURE 3


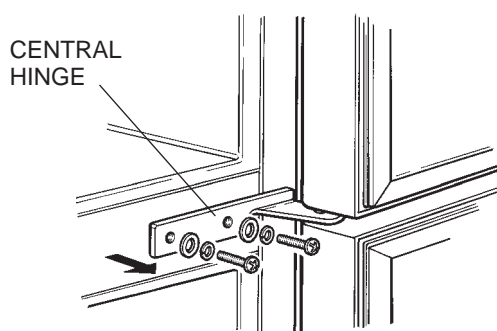 


FIGURE 4

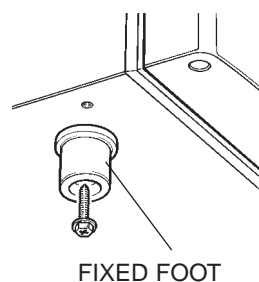 

Installation

Important

Make sure that the voltage marked on the rating label on the product corresponds with the voltage in your home.


This quality product has been tested and certified to meet all applicable UK electrical and safety standards.

The appliance is designed to operate at normal room temperatures. Position it away from any heat source such as a boiler, ovens and heaters which will reduce the cooling efficiency of the chiller. It is also not advisable to install the appliance in unheated locations such as garages or outbuildings, as these will impair the operation of the chiller in winter.

The chiller requires space around the casing for efficient cooling and operation. It is designed for freestanding and not to be built-in.

The chiller must be installed on a firm, flat and level surface for it to work quietly and efficiently. If necessary, turn the adjustable foot to level the appliance (Figure 5).

 FIGURE 5

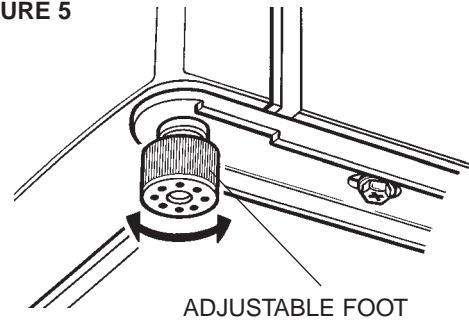

Switching on

Plug the chiller into a nearby power socket and switch on. A humming from the compressor will indicate that the chiller is running.

Notes on operation

During normal operation the following noises may be heard:

- ❖ Stifled murmur from compressor when it is working.
- ❖ Soft gurgling from the coolant flowing through the cooling system.
- ❖ Click from the thermostats switching on and off.

Controls

Temperature control

The temperature inside the top and bottom compartments of the chiller can be individually regulated depending upon the contents stored.

On initial switch on turn the thermostat controls in the direction of the arrow to a LO (the coldest) position (Figure 6). Align the position with the marker and allow 30 minutes for the temperature inside the chiller to stabilise (Figure 6).


If you wish to make the temperature less cold inside the chiller, turn the thermostat control to MED or HI.

Recommended temperatures for wine storage:

Wine type	Temperature	Control settings
Red wines	15–18°C	HI
Dry/white wines	10–15°C	MED
Sparkling wines	7–12°C	LO
Rosé wines	10–12°C	MED

Note: The above settings on the temperature controls are dependent upon room temperature and the location of the chiller.

 FIGURE 6

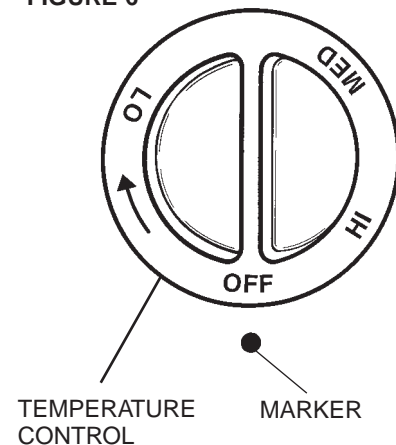

Door lock

The door locks both compartments. Turn the lock anti-clockwise to unlock the door and clockwise to lock. Always remember where you keep the key.

Interior light

 
The interior lamp is only available in the lower compartment. To turn the lamp to ON press the rocker switch to ON. To turn the lamp to OFF press the rocker switch to OFF. The lamp must be manually turned OFF and ON.

Replacing the lamp

Unplug the chiller from the mains supply.

Remove the screw and diffuser.

Unscrew the lamp from the lampholder and replace it with a lamp of the same type and wattage (10 Watts).

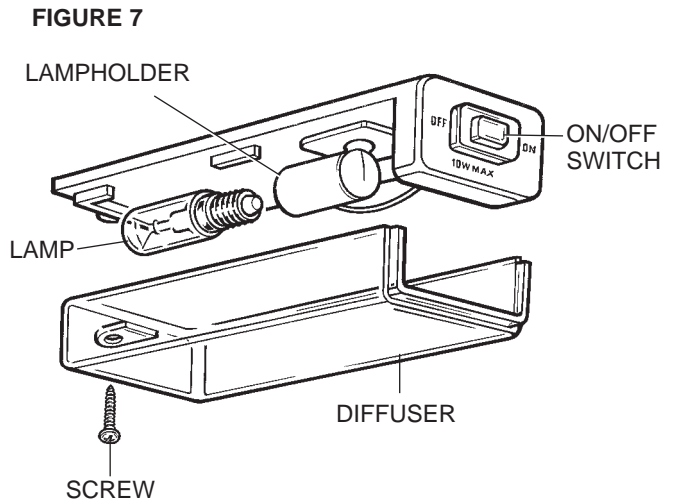

Maintenance and cleaning

Important

The chiller must be turned off at the mains before maintaining or cleaning.

It is recommended to clean and wipe out the chiller after any spillage inside or outside the appliance.

Use a teaspoonful of bicarbonate of soda diluted in a pint of warm water. Wipe the internal surfaces and shelving to remove residues. Leave to dry before reloading.


Keep water away from the temperature controls.

Finally, wipe the door seal.

The chiller automatically keeps a constant temperature dependent upon the thermostat setting. Beware of the back wall as this may be cold to the touch.

Wipe the outside casing from time to time in order to remove dirt and dust.

 FIGURE 8

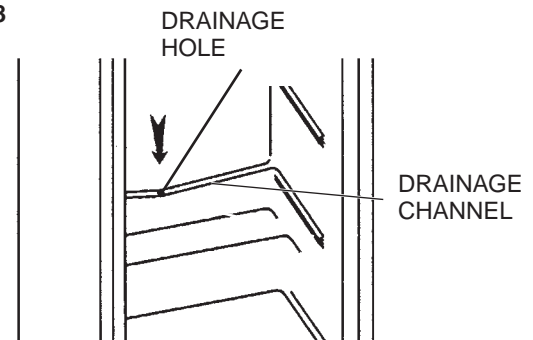

Drainage channel

Water collects in the drainage channel on the back wall located in the lower compartment. The drainage needs to be cleaned regularly to avoid the build up of impurities. Wipe the channel with a damp cloth and clean out any residue from the drainage hole (Figure 8).

Use a soft brush or vacuum cleaner to remove the dust from behind the chiller, taking care not to damage the pipes and wiring.

Also remove dust from the compressor motor housing which is situated at the rear back of the appliance casing.

Clean the collecting tray from above the compressor motor (rear of the casing) ensuring that the drainage pipe is also clear.

When not in use

If leaving the chiller unused for a prolonged period, unplug from mains, wipe dry and leave the doors open.

Troubleshooting

Problem	Possible cause	Remedy
Appliance does not run	No power Faulty fuse Temperature control set to OFF	Check power is switched ON Check fuse in plug Turn thermostat setting higher
Chiller is not cold enough	Door is open for too long Located too near a heat source Inadequate airflow around appliance Thermostat set too high	Do not open door needlessly Relocate appliance Lower temperature by turning control towards LO
Abnormal noise and vibration	Appliance not level Cooling tubes touching cabinet or other parts	Choose a level surface Carefully ease away tubes from other parts

Fuse and mains plug replacement

This product is supplied with a fitted plug which contains a 13A fuse. If you are simply replacing the fuse, you must use a 13A fuse which has been approved by ASTA to BS1362.

If the plug does not fit the socket or becomes damaged, a new plug must be fitted. Replace the original plug with the correct plug for your socket. If this is a 3-pin (square pin) 13A (BS1363) plug, you must make sure that it is fitted with an ASTA approved 13A fuse.

If another type of plug is used, it must be protected by a 15A fuse, either in the plug or at the distribution board.

1. Cut off the existing fitted plug.

2. The wires in the mains lead supplied with this appliance are coloured in accordance with the following code (Figure 9):

GREEN/YELLOW = EARTH (E) BLUE = NEUTRAL (N) BROWN = LIVE (L)

This product must be earthed.

As the colours of the wires in the mains lead may not correspond with the colour markings identifying the terminals in your new plug, proceed as follows.

The wire which is coloured GREEN or YELLOW/GREEN must be connected to the terminal which is marked with the letter E or \oplus symbol or coloured GREEN or YELLOW/GREEN.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK or BLUE.


The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED or BROWN.

3. Ensure that the connections are tight and that no loose strands are left out of the terminals.

IF IN ANY DOUBT CONSULT A QUALIFIED ELECTRICIAN.

If the mains lead becomes damaged consult a qualified electrician.

 FIGURE 9

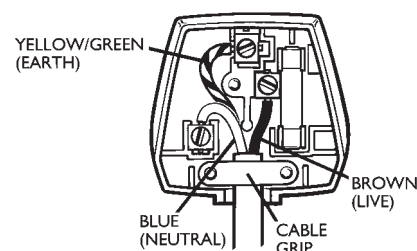

Specification

Capacity (litres)	82
Dimensions: HxWxD mm	846x472x450
Power consumption (Watts)	78
Power supply	220/240V, 50Hz
Climate class	N
Refrigerant	R600a

Product specification may vary without prior notice.

Safety measures



This appliance/fitting is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin symbol, indicates that this appliance/fitting may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product."

Never try to repair the appliance or the electrical parts yourself. Any repair carried out by an unskilled person is dangerous and may affect the guarantee. Contact the Helpline below for assistance and advice.

Disposal of old chiller or fridge

Disposal of the appliance must conform with EU environmental regulations.

Cut off the mains lead and remove any door locks to ensure the appliance is beyond further use.

The appliance must be delivered to an authorised collection centre.

After sales service

This appliance is guaranteed for a period of two years from date of purchase against defects in materials and workmanship only, and provided that all these user instructions have been strictly complied with. The guarantee does not cover incidental or consequential loss, such as loss of consumables.

Where this guarantee applies, the appliance will be repaired or replaced at the manufacturer's option without charge. If the guarantee does not apply or has expired, you will be given a quotation for cost of repairs and any parts required.

Keep your purchase receipt with these instructions, and in the event of breakdown contact the HELPLINE on 0844 871 0011.

For Faults and Assistance
Phone: 0844 871 0011

