

COOLZONE[®]



CZ51156

Drinks chiller

USER INSTRUCTIONS

Please read these instructions carefully before using this product and keep them safe for future reference.

Page contents

Before use	2
Do and Don't	2
Parts identification	3
Door reversal	3
Installation	4
Maintenance and cleaning	5
Troubleshooting	6
Fuse and mains plug replacement	6
Specification	7
Safety measures	7
After sales service	7

Before use


Packaging

The packaging is recyclable so dispose of it according to local regulations. Keep the packaging materials out of reach of young children.

Warning

The chiller is heavy and care is needed when unpacking and moving it. Get extra help and only hold it by the casing – not the door or trim.

After unpacking, wipe the casing with a dry cloth and clean the inside with a damp cloth ready for use.

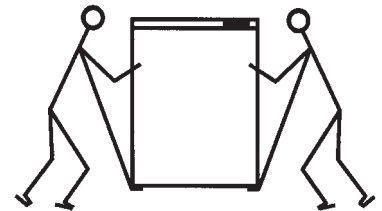

Do and Don't


- ❖ Do read these instructions thoroughly before using this appliance.
- ❖ Do install the appliance only in the vertical position.
- ❖ Do stand for 12 hours to allow the cooling gases to stabilise before connecting to power supply.
- ❖ Do install to allow for adequate ventilation around the appliance (see Figure 5).
- ❖ Do not install near heaters or other heat sources.
- ❖ Do unplug before cleaning and maintenance.
- ❖ Don't install the appliance in humid or extreme conditions.
- ❖ Don't attempt to repair the appliance yourself (see Helpline information – page 7).
- ❖ Only use it in accordance with the manufacturer's instructions.
- ❖ Don't use any other electrical device inside the appliance to defrost.
- ❖ Don't store goods containing inflammable or other explosive gases.
- ❖ Don't leave door closed if appliance is left switched off for long periods.

Parts identification

Check the following contents are included with the product and inspect the casing for any damage. If there is any damage, contact the retailer from whom you purchased the product.

1. Thermostat control
2. Adjustable foot
3. Slide-out shelf

FIGURE 1

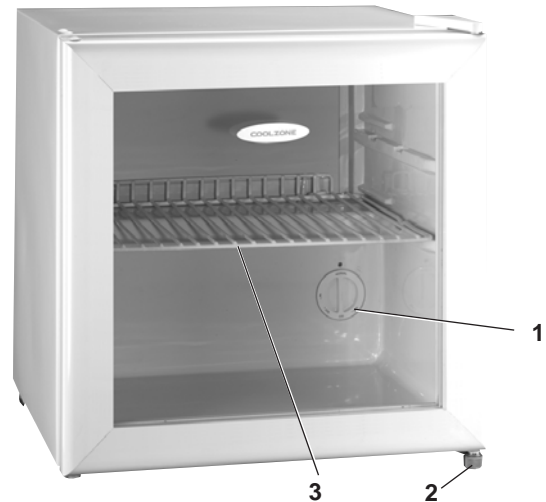

Door reversal

This appliance has the facility to hang the door on the opposite side.

Depending where you plan to locate the chiller, reversing the door may make access more convenient.

1. Remove the top hinge cover (Figure 3).
2. Support the door and unscrew the two screws to remove the top hinge bracket and spacer (if fitted).
3. Lift away the door.
4. Unscrew the foot (Figure 4).
5. Remove two screws and take off the bottom hinge plate (Figure 5).
6. Screw the foot into one of the holes uncovered when the hinge plate was removed.
7. Screw the bottom hinge plate to the opposite corner of the cabinet.
8. Replace the door on the lower hinge pin.
9. Support the door and fit the top hinge.
10. Replace the top hinge cover.

FIGURE 3

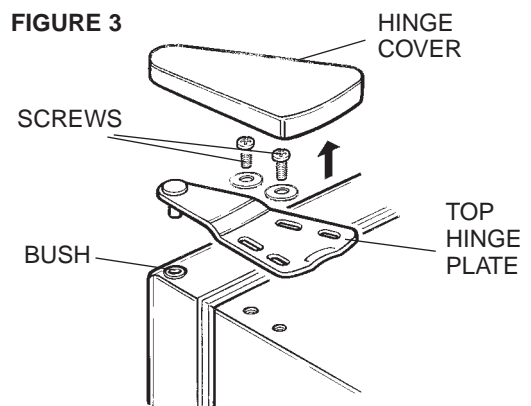


FIGURE 4


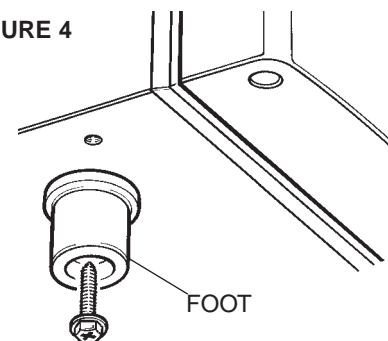


FIGURE 5

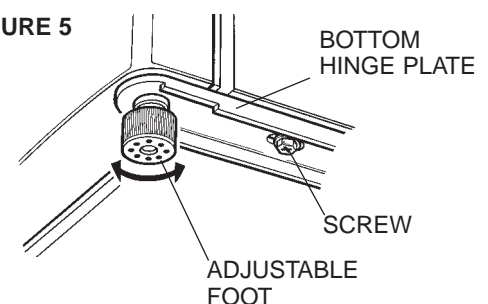

Installation

Important

Make sure that the voltage marked on the rating label on the product corresponds with the voltage in your home.

This quality product has been tested and certified to meet all applicable UK electrical and safety standards.

The appliance is designed to operate at normal room temperatures. Position it away from any heat source such as a boiler, ovens and heaters which will reduce the cooling efficiency of the chiller. It is also not advisable to install the appliance in unheated locations, such as garages or outbuildings, as these will impair the operation of the chiller in winter.


The chiller requires space around the casing for efficient cooling and operation. The minimum clearances are shown in Figure 6.

The chiller must be installed on a firm, flat and level surface for it to work quietly and efficiently.

An adjustable foot under the hinge plate can be turned by hand to make fine adjustments to level the appliance.

Ensure the shelves are correctly located in the runners and that the collecting tray above the compressor is in position (rear of the casing).

FIGURE 6

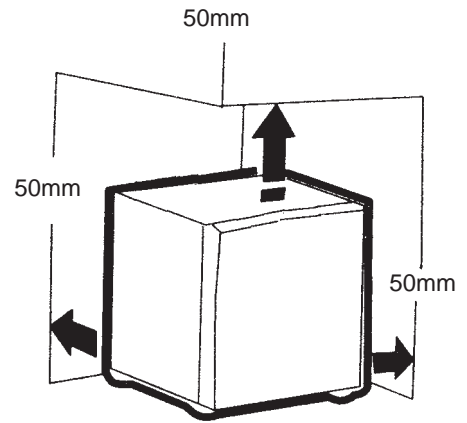

The diagram shows the correct air flow allowance that should be left around the appliance.

Switching on

Plug the chiller into a nearby power socket and switch on. Turn the thermostat control to the NORMAL position on the dial and leave the chiller running with the door closed for approximately 2 hours. This will allow the inside temperature to stabilise.

Temperature control

The temperature of the chiller is best maintained at around 0°C to +5°C, depending upon the season of the year and room temperature.

It is recommended to use (not supplied) a fridge thermometer to accurately monitor the internal temperature in the chiller.

Never put hot items in the chiller.

Notes on operation

During normal operation the following noises may be heard:

- ❖ Stifled murmur from compressor when it is working.
- ❖ Soft gurgling from the coolant flowing through the cooling system.
- ❖ Click from the thermostat switching on and off.

Maintenance and cleaning

Important

The chiller must be turned off at the mains before maintaining or cleaning.

It is recommended to clean and wipe out the chiller after any spillage inside or outside the appliance.

Use a teaspoonful of bicarbonate of soda diluted in a pint of warm water. Wipe the internal surfaces and shelving to remove residues. Leave to dry before reloading.

Keep water away from the thermostat housing.

Finally, wipe the door seal.

The chiller automatically keeps a constant temperature dependent upon the thermostat setting. Beware of the back wall as this may be cold to the touch.

Wipe the outside casing from time to time in order to remove dirt and dust.

External cleaning

Keep the compressor motor (located at rear of casing) free from dust to maintain optimum efficiency. Use a soft brush or vacuum cleaner to remove the dust, taking care not to damage the pipes and wiring.

When not in use


If the appliance is to be emptied and turned off for a long period it is advisable to:

- ❖ Disconnect the unit from the mains supply.
- ❖ Empty the chiller.
- ❖ Clean and dry the interior.
- ❖ Leave the door open – do not close.

Drainage channel

Water collects in the drainage channel on the back wall. The drainage needs to be cleaned regularly to avoid the build up of impurities. Wipe the channel with a damp cloth and clean out any residue from the drainage hole.

FIGURE 7

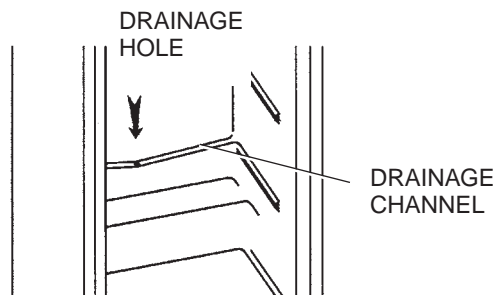

Clean the collecting tray from above the compressor motor (rear of the casing) ensuring that the drainage pipe is also clear.

Troubleshooting

Problem	Possible cause	Remedy
Appliance does not run	No power Faulty fuse Thermostat setting too low	Check power is switched ON Check fuse in plug Set the thermostat setting higher
Chiller is not cold enough	Door is open for too long Located too near a heat source Inadequate airflow around appliance	Do not open door needlessly Relocate appliance See Figure 4
Abnormal noise and vibration	Appliance not level Cooling tubes touching cabinet or other parts	Choose a level surface Carefully ease away tubes from other parts

Fuse and mains plug replacement

This product is supplied with a moulded plug which contains a 13A fuse. If you are simply replacing the fuse, you must use a 13A fuse which has been approved by ASTA to BS1362 (Figure 8).

Do not use without the fuse cover being in position.

If the plug does not fit the socket or becomes damaged, a new plug must be fitted. Replace the original plug with the correct plug for your socket. If this is a 3-pin (square pin) 13A (BS1363) plug, you must make sure that it is fitted with an ASTA approved 13A fuse.

If another type of plug is used, it must be protected by a 15A fuse, either in the plug or at the distribution board.

1. Cut off the existing fitted plug.
2. The wires in the mains lead supplied with this appliance are coloured in accordance with the following code (Figure 9):

GREEN/YELLOW = EARTH (E) BLUE = NEUTRAL (N)
BROWN = LIVE (L)

This product must be earthed.

As the colours of the wires in the mains lead may not correspond with the colour markings identifying the terminals in your new plug, proceed as follows.

The wire which is coloured GREEN or YELLOW/GREEN must be connected to the terminal which is marked with the letter E or \oplus symbol or coloured GREEN or YELLOW/GREEN.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

3. Ensure that the connections are tight and that no loose strands are left out of the terminals.

IF IN ANY DOUBT CONSULT A QUALIFIED ELECTRICIAN.

If the mains lead becomes damaged consult a qualified electrician.

FIGURE 8


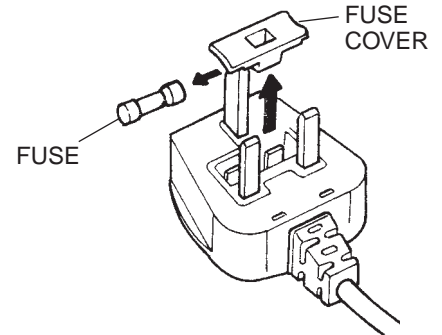


FIGURE 9

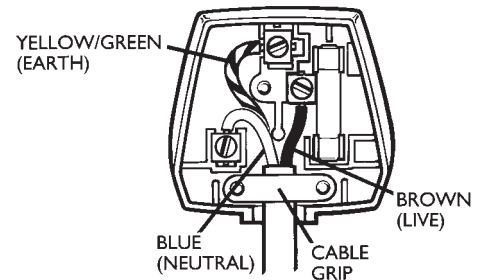


Specification

Capacity (litres)	50
Dimensions: HxWxD mm	510x450x450
Consumption (watts)	68
Power supply	220/240V, 50Hz
Nominal daily consumption (kWh)	0.54
Climate class	N

Product specifications may vary without prior notice.

Safety measures

This appliance/fitting is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

 The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin symbol, indicates that this appliance/fitting may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.

Never try to repair the appliance or the electrical parts yourself.

Disposal of old chiller

Disposal of the appliance must conform with EU environmental regulations.

Cut off the mains lead and remove any door locks to ensure the appliance is beyond further use.

The appliance must be delivered to an authorised collection centre.

After sales service

This appliance is guaranteed for a period of two years from date of purchase against defects in materials and workmanship only, and provided that all these user instructions have been strictly complied with. The guarantee does not cover incidental or consequential loss, such as loss of food.

Where this guarantee applies, the appliance will be repaired or replaced at the manufacturer's option without charge. If the guarantee does not apply or has expired, you will be given a quotation for cost of repairs and any parts required.

Keep your purchase receipt with these instructions, and in the event of breakdown contact the HELPLINE on 0844 871 0011.

